
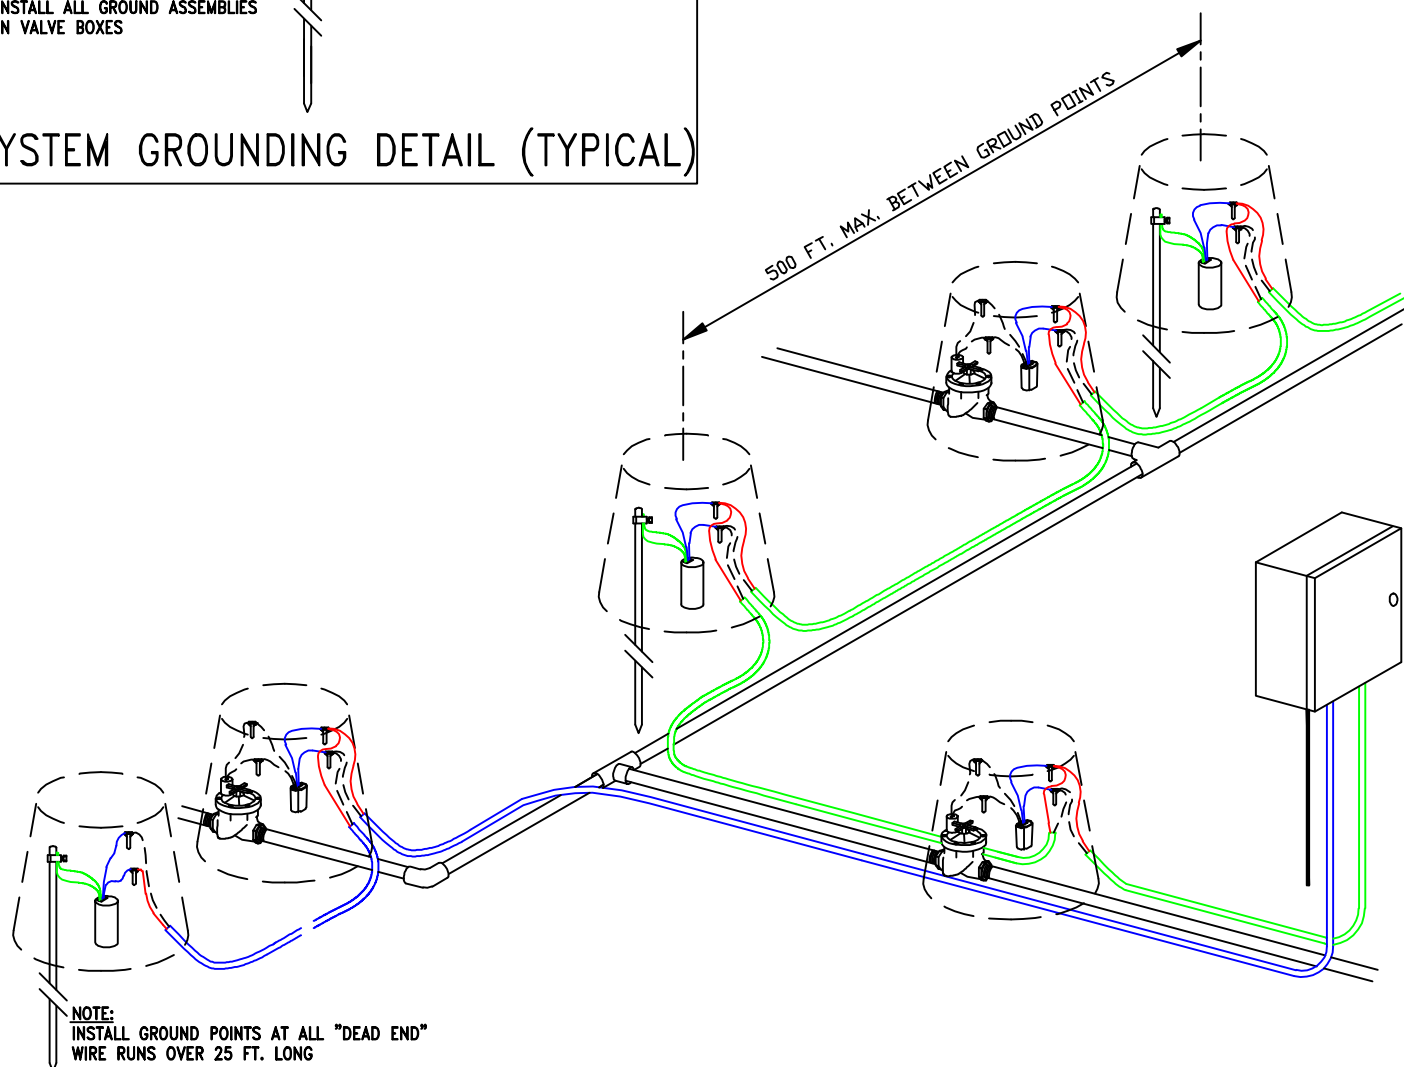


NOTES:

1. ALL WIRE CONNECTION SHALL BE MADE WITH APPROVED CONNECTORS.
2. MAKE ALL WIRE SPLICES IN VALVE BOXES.
3. LEAVE A MINIMUM OF 12" EXTRA WIRE AT ALL SPLICE POINTS.
4. TEST EARTH TO GROUND RESISTANCE AT ALL GROUND POINTS.
5. EARTH TO GROUND RESISTANCE MUST BE LESS THAN 50 OHMS.

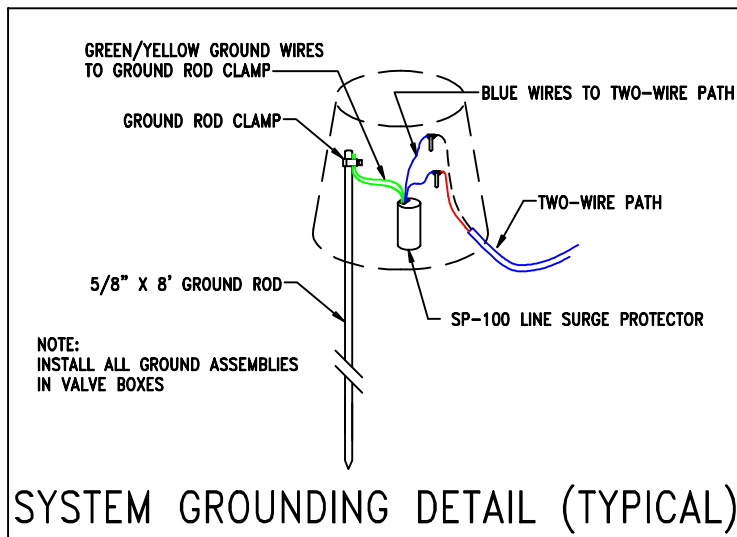

RKD

Scale: No Scale

SYSTEM GROUNDING (TYPICAL)